



▲ Vorderkante Seitenwand
front edge of side wall

290

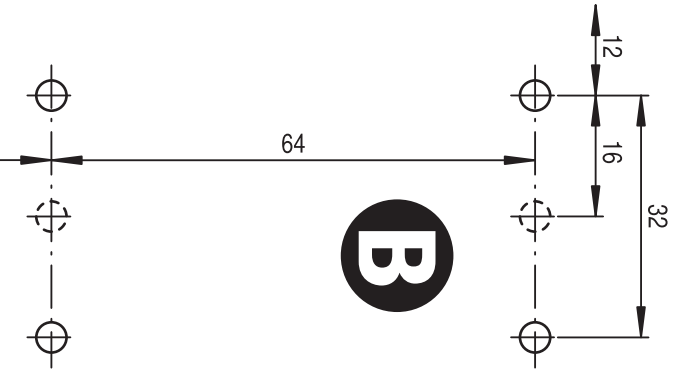

B

▲ cabinet floor bottom
Schrankboden unten

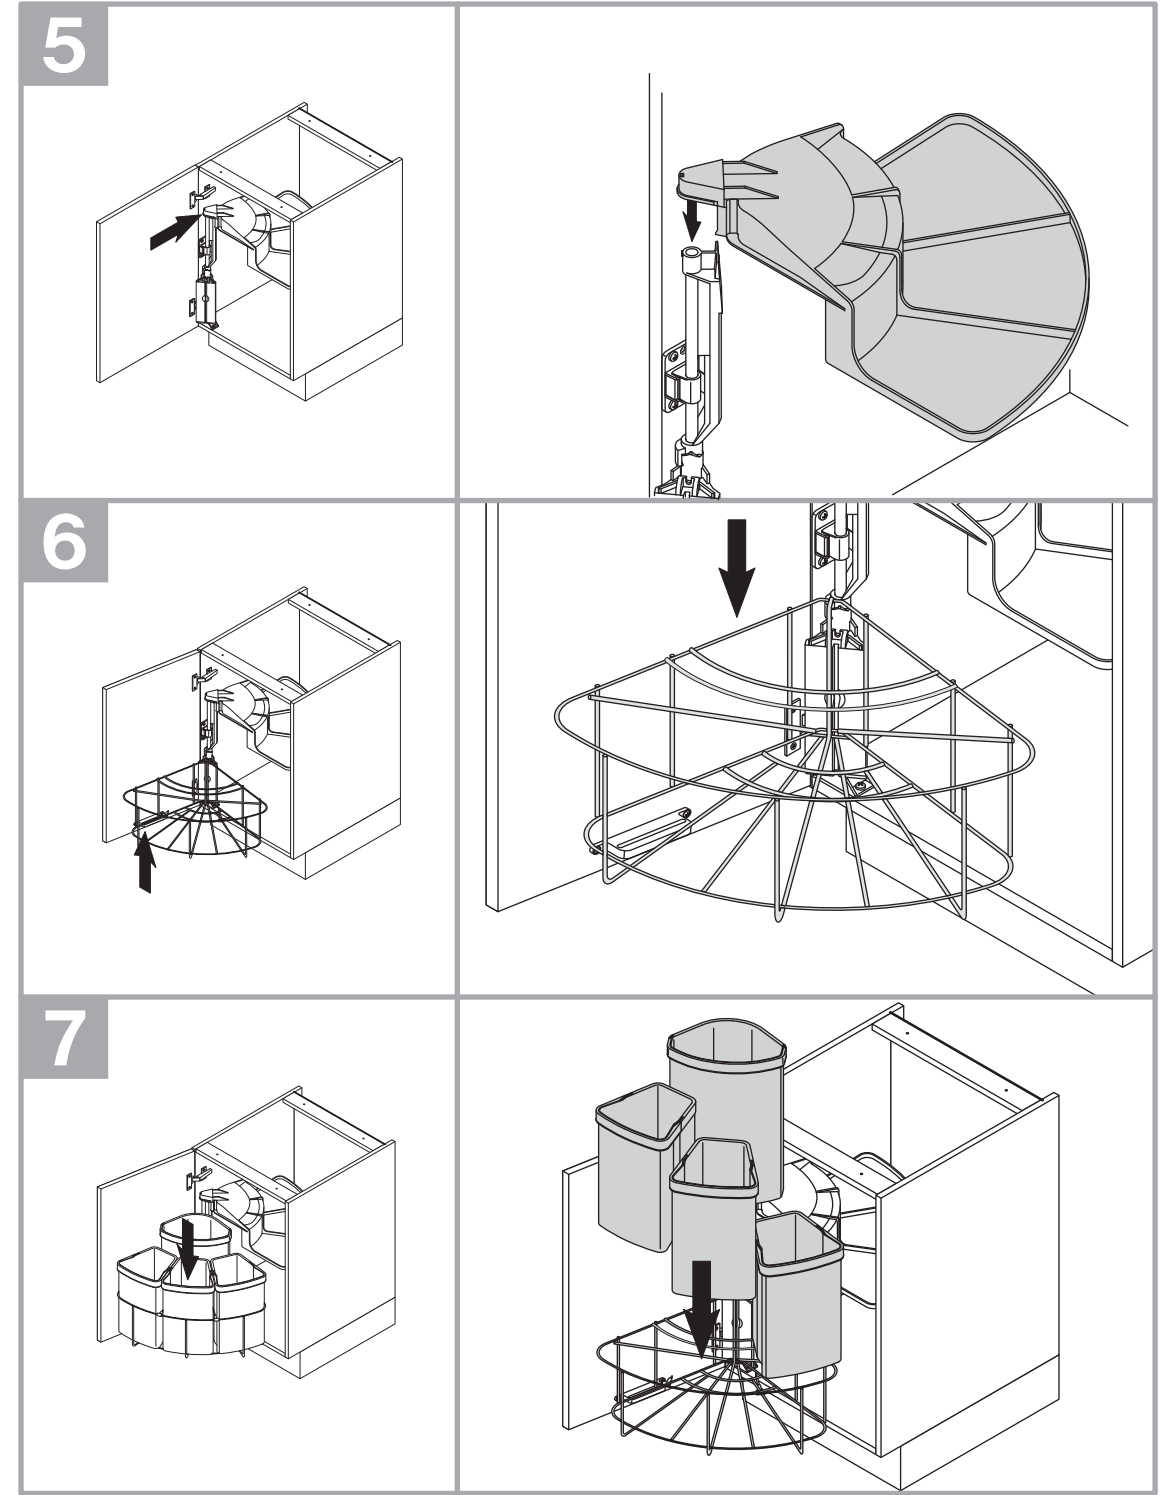


▲ Doorstrike bottom
Türanschlag unten

▲ Vorderkante
front edge
of side wall

246


10/2013

Naber® CABBI® 3 + 4
Montageanleitung / Assembly instructions

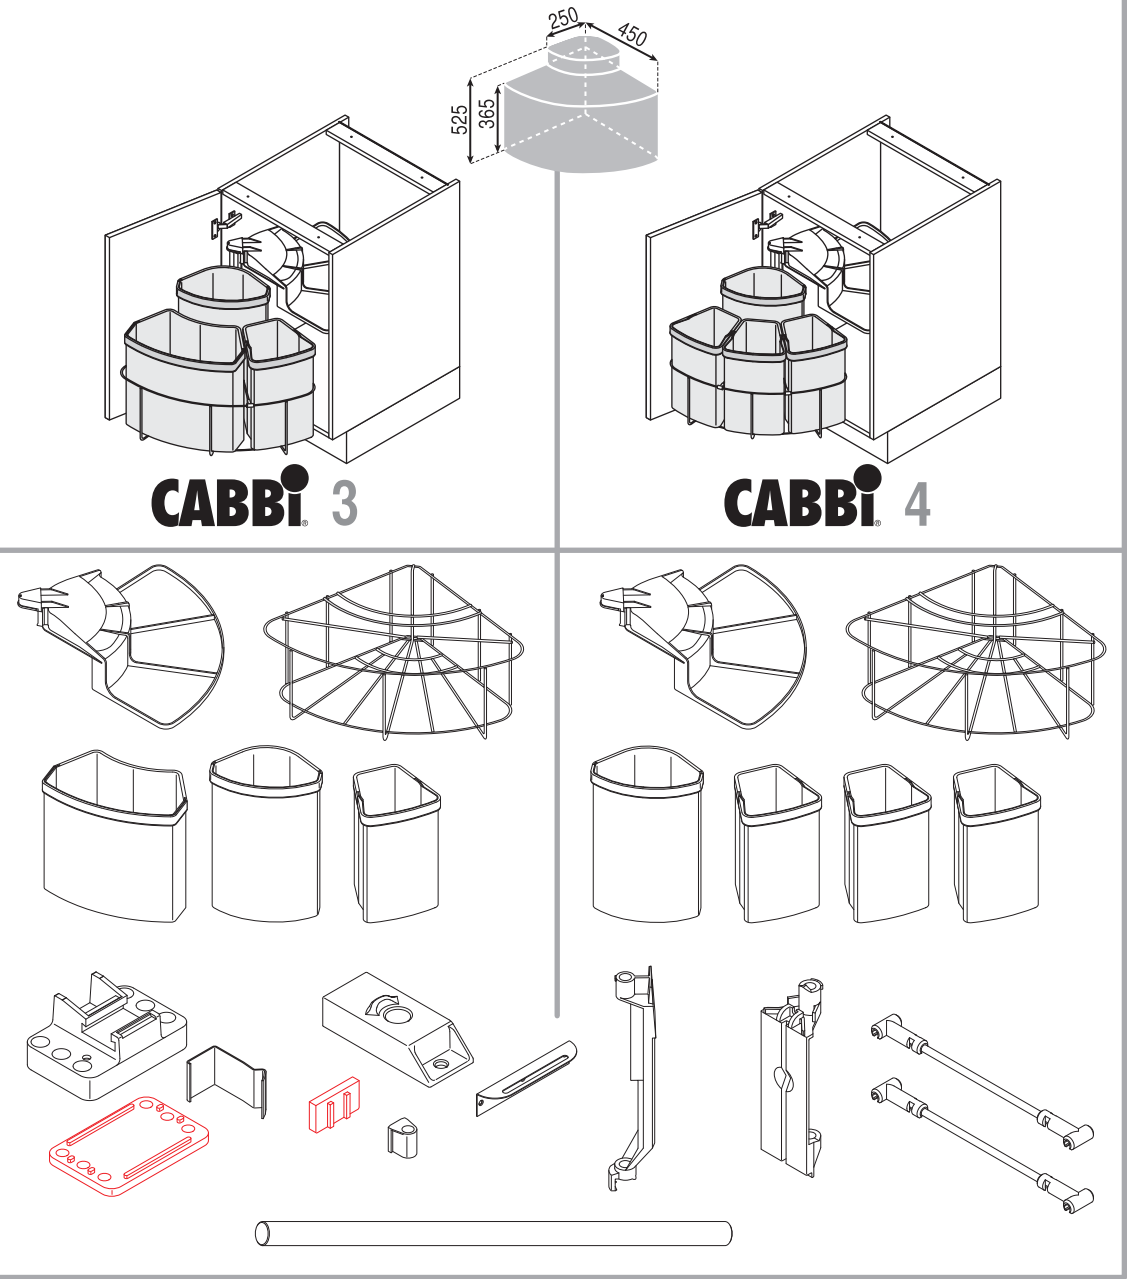

44007308_01

C

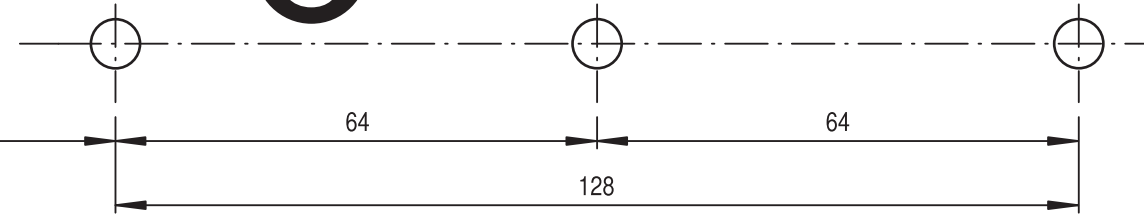

▲ front edge of cabinet floor
Vorderkante Schrankboden

A

